

## Mounting Instructions

- 1) When opening the box you will find the chandelier covered with all packing materials. Carefully remove the packing materials to uncover the chandelier. Only remove those materials which are not wrapped around parts of the chandelier so if you need more than gentle force leave the piece be and continue with another wrapping. (The chandelier is also wrapped in paper.) It is also possible, that certain accessories (e.g. canopy, rod, chain,...) sit within the stuffing material. Remove these from the box as soon as you come by them.
- 2) Once the chandelier's top is completely uncovered check if the mounting is already connected to the chandelier (most probable in case of a chain). If not then connect the mounting to the chandelier and lead the wires through it straight to the upper end.
  - The chandelier should now sit in the box, still wrapped but with the mounting attached.
- 3) Now fix the canopy onto the mounting and lead the wires through it. The chandelier is now ready to be removed from the box.

  Try to take the chandelier out of the box and suspend it on the ceiling hook in one go. Here you might use a pulley or an intermediate mounting (rope, chain or long hook) at your convenience.
- 4) Now you can connect the wires. The colors of the wires are as follows Black: Phase 1

Brown: Phase2 (If applicable. This will only be used if the chandelier is built for 2 circuits. If not this wire is disused.)


Blue: Neutral conductor Yellow-Green: Earth


5) Now you can completely un-wrap the chandelier.


In Some cases the box is reinforced with a wooden frame in which the chandelier "hangs". The top part of this has to be removed before attaching the mounting. This frame is for transport security only. The chandelier can "sit" in the box for a short while without trouble.


## LOBMEYR




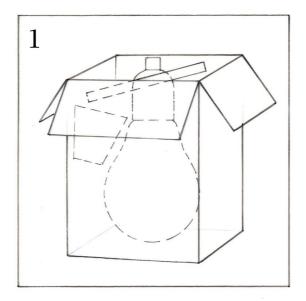


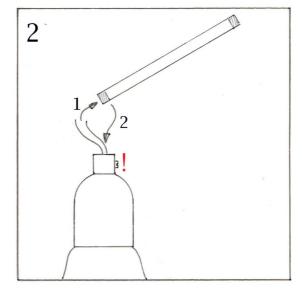

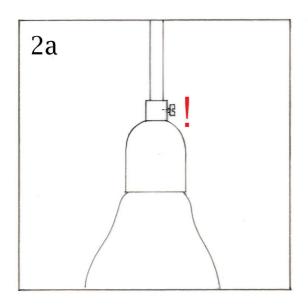

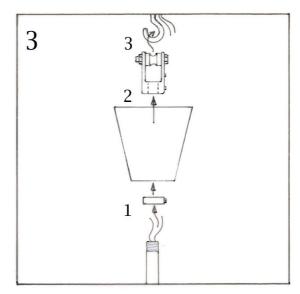

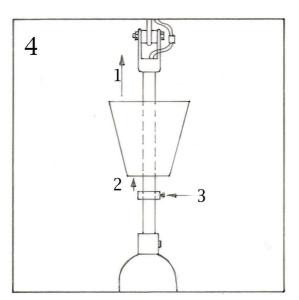

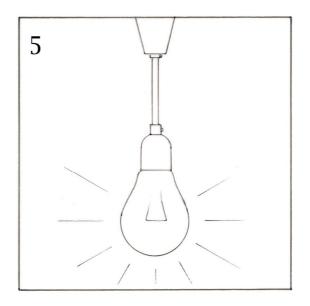

## LOBMEYR